




Assembly Instruction

Product Name: San Pierre Walnut Veneer Coffee Table High Travertine Finish Sintered Stone Top

Product Id: 129108

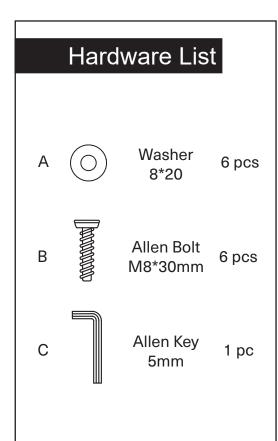

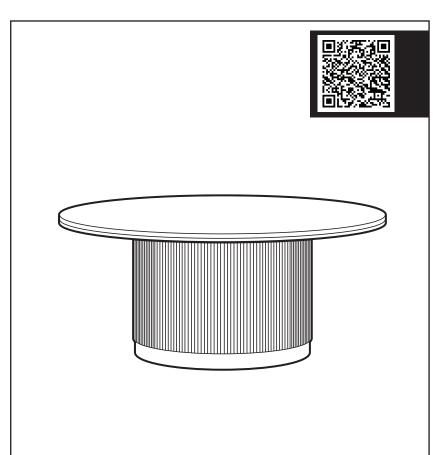

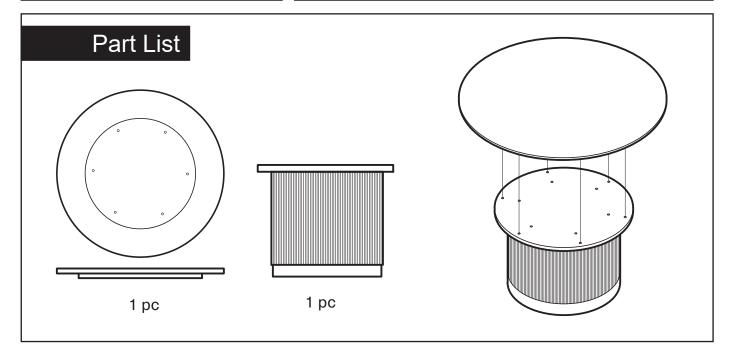

Note

- 1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
- 2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
- 3. Keep all packaging materials intact until assembly is complete.
- 4. Before assembling the item, carefully read all provided instructions.
- 5. Handle tools with care during assembly to prevent injuries.

