



Assembly Instruction


Product Name: San Pierre Walnut Veneer Dresser

Travertine Finish Sintered Stone Top 150X43.7X84cm

Product Id: 129321

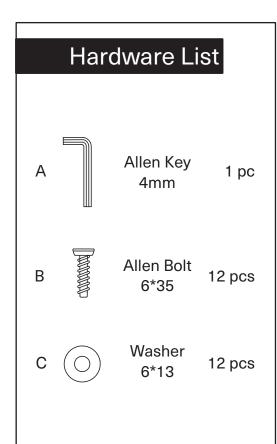


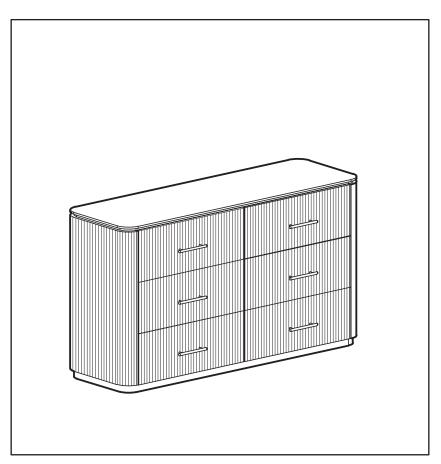


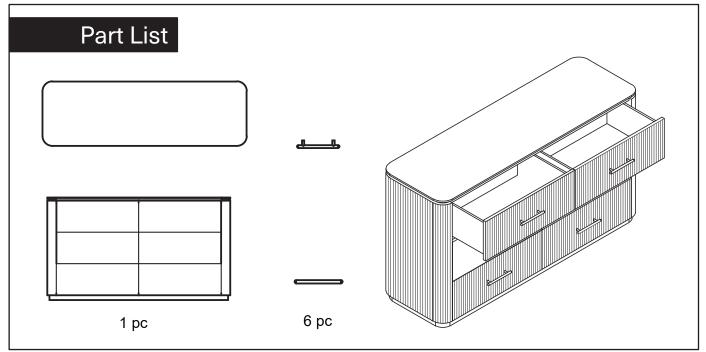

Note

- 1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
- 2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
- 3. Keep all packaging materials intact until assembly is complete.
- 4. Before assembling the item, carefully read all provided instructions.
- 5. Handle tools with care during assembly to prevent injuries.

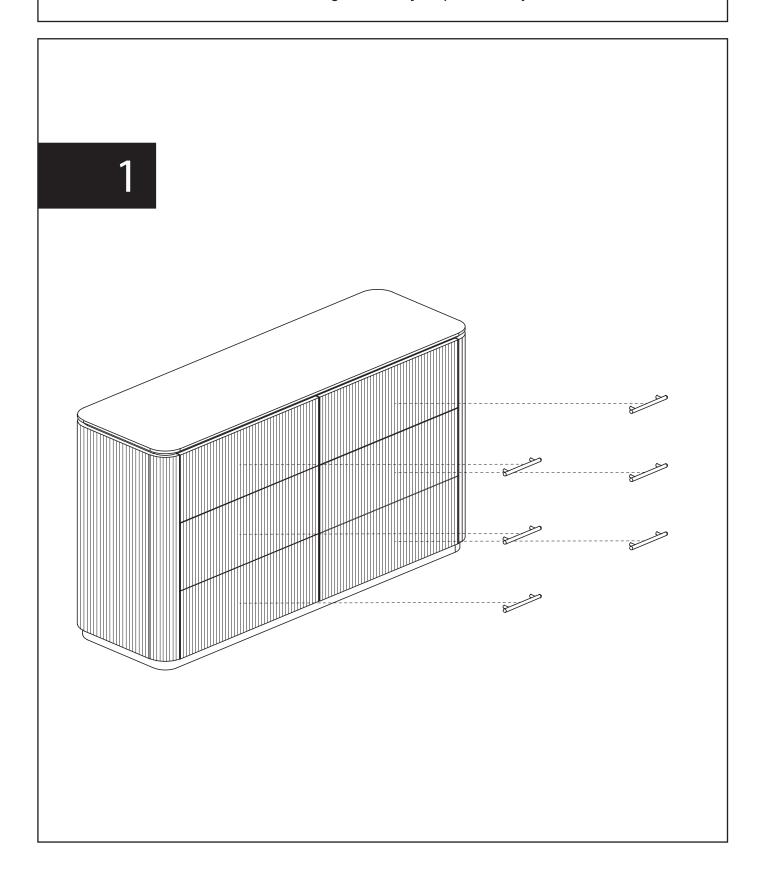

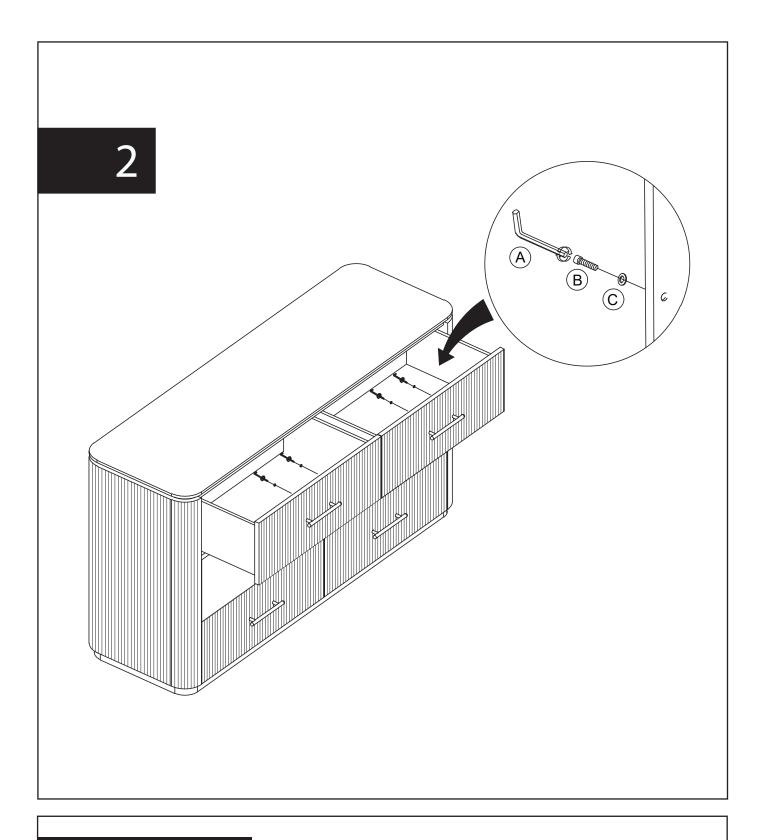

- 1. Always secure this funiturre with an anchor device
- Never allow children to stand, climb or hang on drawers, doors, or shelves
- 3. Never open more than one drawer at a time
- 4. Place heavy items down low

